

TEMPERATURE CONTROLLER

RT-825

**WARRANTY.** The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealer or directly with us. More information how to make a complaint can be found on the website: [www.fif.com.pl/reklamacje](http://www.fif.com.pl/reklamacje)



**Do not dispose of this device in the trash along with other waste!** According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.

**Purpose**

The RT-825 temperature controller is designed for direct control of heating devices powered by 230 V with maximum current no higher than 16 A.

**Functioning**

The controller can operate in one of four operating modes:  
 - operation with an internal temperature sensor  
 - operation with an external temperature sensor (included)  
 - operation with two temperature sensors  
 - operation in "timer" mode


When the room temperature falls below 2°C from the temperature set in the controller, the heating device switches on ( symbol on the display). When the room temperature is higher than the set temperature, the heating device will be disconnected. If the controller operates in "0" mode, with two external and internal temperature sensors (parameter F3) and the temperature in the room exceeds the

value set in parameter F5, the heating device will be disconnected. On the other hand, if the temperature falls below the value set in parameter F6 (antifreeze mode), the heating device will be switched on, whether the controller is on or off.

"Timer" mode operation

The "timer" function operates in a cyclic mode starting from switching on the controller for the set time (parameter F1), and then the controller will be switched off for the set time (parameter F2) etc. on all days of the week. The activation time of the controller starts when the number of hours is accepted with the ON/OFF key. When the "timer" function is activated, the temperature control is maintained depending on the settings.

**Description of the external panel**

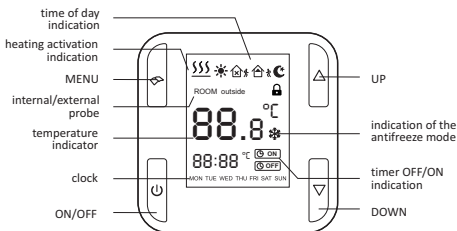

ON/OFF button

Long press of the button switches the controller on or off (about 2 seconds).

UP/DOWN button

Short press of the button during normal operation decreases or increases the value of set temperature by one degree.

MENU button

Short press of the button switches the device to the programming mode.

**Programming**

Press the MENU button to enter the programming mode. In the programming mode you can set 8 parameters. Use the UP/DOWN buttons to choose one of the parameters. Press ON/OFF button to edit a parameter. Change the value of the parameter in the parameter edit mode using the UP/DOWN buttons. Confirm setting with the ON/OFF button.

Parameters

- F1 - set the time for automatic switching-on of the controller. Minimum setting - 1 h.
- F2 - set the time for automatic switching-off of the controller. Minimum setting - 1 h
- F3 - set the operating mode for the temperature sensors:  
 1 - operation with an internal temperature sensor  
 2 - operation with an external temperature sensor (included)  
 3 - operation with two temperature sensors (default setting)
- F4 - set the time: week, hour, minute
- F5 - set the upper threshold of the temperature protection in the range of 40°C to 70°C with increments of 1°C (factory setting: 50°C). It works only in the mode of operation with two temperature sensors.
- F6 - set the antifreeze protection in the range of 2°C to 10°C with increments of 1°C (factory setting: 3°C).

F7 - set temperature correction in case there is a difference between temperature indication from the controller and actual temperature in room. The correction can be adjusted within ±5 °C with increments of 0.1 °C.

F8 - set the weekly program of temperature regulation in a room according to the time of day and divided into working days, Saturday and Sunday.

Set the weekly program of controller operation (F8)

Every day in the controller program is divided into four parts marked with icons:

- morning
- forenoon (leaving the house)
- afternoon, evening (coming back)
- night

It is necessary to set the start time for each of these periods (the hour of the end of the given period is the starting time of the next). The start times for each time of the day should be set separately for business days, Saturdays and Sundays. Temperature value is programmed for each time of day.

The following weekly program of the controller operation is set:

Time of day	Time of day start	Value of the set temperature	
		MON-FRI	SAT, SUN
06:00 - 08:00	06:00	25	25
08:00 - 16:00	08:00	10	10
16:00 - 22:00	16:00	25	25
22:00 - 06:00	22:00	15	15

Setting up a weekly operation program:

1. Press the MENU button to enter the programming mode.
2. Use the UP/DOWN buttons to select parameter F8 and confirm with the ON/OFF button.
3. Use the UP/DOWN button to select the day of the week: MON-FRI, Saturday or Sunday (SAT, SUN).  
Example: Select MON-FRI and confirm with the ON / OFF button.
4. Use the UP / DOWN buttons to select the time of day.  
Example: Select in the morning, confirm with the ON/OFF button.
5. Use the UP/DOWN buttons to set the start time of the "morning" time of day.  
Example: Select 06:00 (change with increments of 15 minutes), confirm with ON/OFF button.  
**WARNING!** The start time of the next period is the end of the previous one, so there is no option to set the ending time of the given period).
6. Use the UP/DOWN buttons to set the desired temperature for this time of day - morning. The temperature can be changed every 1 °C in the range of 5÷55 °C. Confirm with the ON/OFF button.
7. Once the temperature value has been confirmed, the program automatically returns to step 4, allowing to set the parameters of the next time of day.
8. After setting the start times and temperature values, the program will automatically switch to setting the time for Saturday, and then for Sunday. After entering the last parameter for Sunday and confirming it with the ON/OFF button, the program will return to the selection of parameters F1÷F8.
9. To exit the programming mode press the MENU button or wait 5 seconds and then the controller automatically returns to normal operation.

#### Controller reset

Keep the UP button pressed for a controller to reset itself and disconnect heating device.  
Press the ON/OFF button to return to operation.

#### Protection

To protect the controller from unauthorized access, press the UP/DOWN button for a longer time.  
Activation of the protection is signaled by a padlock symbol on the display. Unlocking is done in the same way.

#### Automatic/manual operation

Longer press of the DOWN button changes the controller mode of operation from automatic to manual and vice versa (day time icon goes off).

Manual operation - room temperature control is based on the current setting. Use the UP/DOWN buttons to change the temperature.  
Automatic operation - the temperature is maintained on the basis of the pre-programmed cycles of the controller.

#### Temperature readout

If the controller is set to operate with two temperature sensors by short press of the ON/OFF button, the readout source changes from the internal sensor to the external.


#### Controller operation errors indication

Er1 - damage to internal temperature probe  
Er2 - damage of external temperature probe  
Er3 - damage to internal and external probe

#### **Connection scheme**



Take special care when installing the controller. Incorrect connection may result in electric shock and/or damage to the controller and the powered device.

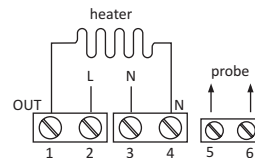

- 1/4 - output for heater connection
- 2 - L power supply of the controller
- 3 - N power supply of the controller
- 5/6 - output for temperature probe connection

#### **Mounting**




Do not install a device that is damaged or incomplete.



Do not install the device in rooms with high humidity, such as bathrooms.

1. Disconnect the power supply from the circuit to which the controller will be connected.
2. Using a narrow, flat-blade driver, gently press the catch (marked with the arrow on the drawing) to lock the controller housing.

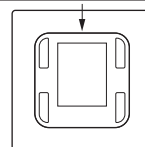

3. Remove the cover and the frame of the controller, taking care not to damage the electronics of the controller.
4. Connect according to the scheme.
5. Place the bottom part of the controller in the flush-mounted box and fix it with the screws.
6. Put the frame back on and press the cover.

#### **Technical data**

power supply	230 V AC
current load heating circuit	<16 A
temperature adjustment range	5÷55°C
hysteresis	2°C
setting accuracy	1°C
measurement accuracy	±0,1°C
power consumption	1 W
working temperature	0÷65°C
terminal dimensions	2.5mm <sup>2</sup> screw terminals
front	86×86 mm; D= 22 mm
back	∅60; D= 27.5 mm
mounting	in ∅60 flush mounted
ingress protection	IP20
external temperature sensor	NTC
sensor dimensions	∅7; h=25 mm
sensor isolation	PC muff
wire	PC 2×0,34 mm <sup>2</sup> ; l= 3 m