

F&F Filipowski sp. j. Konstantynowska 79/81 95-200 Pabianice phone/fax: (+48 42) 215 23 83 / 227 09 71 POLAND http://www.fif.com.pl e-mail: fif@fif.com.pl

MICROWAVE MOTION DETECTOR

DRM-02

WARRANTY. The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealeror directly with u.s. More information how to make a compliant can be found on the website: www.ffc.com.pl/reklamacie





Purpose

The motion detector is used for automatic, temporary lighting attach if a person or another object appears in detector's range in places such as hallways, courtyards, approaches and driveways, garages, etc.

Microwave sensor allows for motion detection by wooden boards, plasterboard panels, glass and plastics.

DRM sensor emits and bounces high-frequency 5.8 GHz electromagnetic waves. The sensor detects changes in the reflected waves caused by movement of the object in the area of detection. The sensor detects movement of an object to and from the sensor. Movement in the range of detection will automatically attach the lighting for time set by the user. After this time the lights will be turned off automatically. The motion sensor is equipped with light dependant relay able to attaching lighting during the day. Detection status and standby to attach lights are activated only after dusk. Sensor activation time might be adjust by the user.

- 1 -


Technical data

supply	230V AC
current load	<5A
frequency of the microwaves radiatio	n 5,8GHz
power radiation	<10mW
detection range	360°
detection ray - adjustable (for h=2,5m	n) 1÷10m
activation treshold - adjustable	2÷2000Lx
receiver's activation time - adjustable	8s÷12min.
activation delay	1s
power consumption	0,9W
connection	screw terminals 1mm ²
working temperature	-25÷50°C
dimensions	Ø103 h=42mm
fixed	two screws to the substrate
protection level	IP40

Assembly

- 1. Unscrew the outer shield of the detector. Unscrew the two screws and remove the sensor cover (Pict. 1).
- 2. Disconnect the power.
- 3. Wires provide throughout eyelet rubber in mounting base of the sensor.
- 4. Basis with two screws attached to the substrate. (Pict. 2).
- 5. Connect according to schema.
- 6. Set area of detection, set the sensitivity of the light dependant relay and activation time.
- 7. Assemble the sensor's cover housing (Pict. 3).

Wiring diagram



In addition, there is a possibility of adjustment of the detection area in range 3-10 m (for h= 2.5 m) and the receiver actuation time adjustment to 8 s \div 12 min. The inclusion of the receiver is signaled by a shining green LED. Sensor can work indoors. The sensor allows for motion detection by wooden boards, plasterboard panels, glass and plastics. Temperature changes do not affect on motion detection

The power of microwave radiation is relatively low and is completely safe for humans and animals. Its value is less than 10 mW. By comparison, microwaves and cell phones radiate about 1000mW of power (100 times harder).

Settings

Detection range



Radius of the sensor detection can be adjusted in the range from 2 m to 10 m (the parameters for the sensor mounted at a height of 2.5 m). Rotate the knob to the right [max] increases the area of a field of detection, rotate left [min] reduces the area of the field detection.



Receiver's actuation time can be adjusted between 8 s for 12 min. Rotate knob to the right [max] increases ON time, rotate left [min] reduces the attached time. After a set time receiver is turned off automatically




Sensitivity of light dependant relay

Sensitivity of light dependant relay can be adjusted in range from 2 Lx to 2000 Lx. Rotate the knob toward to the "moon" sign - attached later, rotation to the "sun" sign - attached earlier. In order to sensor was active throughout the day, set the knob maximally toward the "sun".

- 2 -

Device assembly

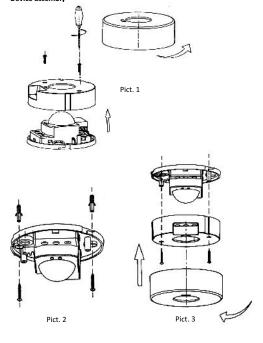

- 4 -D150629