


### Purpose

WNC-3 voltage indicator is designed to measure and indicate the value of 3-phase AC voltage in the range of 80÷500 V AC.

### Functioning

The WNC-3 indicator contains three independent measurement chains. The measured voltage values are indicated directly in numerical form on the 3-row, 3-digit LED display. Voltages are displayed with a resolution of 1 V, measurement is updated five times per second.

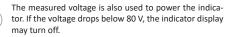

### Mounting


- 1. Disconnect the power supply.
- 2. Install the indicator on the rail in the distribution board.
- Connect the indicator to the source of measured voltage according to the diagram.




It is recommended to protect each phase of the indicator with a slow-blow fuses with a rating current of 0.25 or a 3-phase circuit breaker with B characteristics and rating current of 1 A.

4.Switch on the power supply and verify that the device is working correctly.

# Wiring diagram

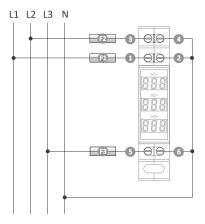

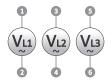

## Technical data

power supply	80÷500 V AC
frequency	50÷60 Hz
voltage indicator	3× 3-digit, 7-segment LED
digit height	7 mm
measurement resolution	1 V
measurement accuracy	1% (±1 digit)
power consumption	<5 VA, <1 W
working temperature	-5÷40°C
storage temperature	-25÷70°C
terminal	1.5 mm <sup>2</sup> screw terminals
tightening torque	0.4 Nm
dimensoins	1 module (18 mm)
mounting	on TH-35 rail
ingress protection	IP20

## Warranty

F&F products are covered by a 24-month warranty from the date of purchase. The warranty is only valid with proof of purchase. Contact your dealer or contact us directly.

#### **CE declaration**

F&F Filipowski sp. j. declares that the device is in conformity with the essential requirements of The Low Voltage Directive (LVD) 2014/35/EU and the Electromagnetic Compatibility (EMC) Directive 2014/30/UE. The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found www.fif.com.pl on the product subpage.